

M106/M112 OEM Manual



7444 Valjean Avenue • Van Nuys, California 91406 • (213) 782-2222

Document No. 100409

MMI DISK DRIVE SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.



 


0

M106/M112 OEM MANUAL

CONTENTS

INTRODUCTION							1
GENERAL DESCRIPTION							1
SPECIFICATIONS							3
PHYSICAL DIMENSIONS							6
DRIVE ASSEMBLIES							10
Head/Disk Assembly							11
							11
Chassis Assembly							11
PHYSICAL INTERFACE							12
J1/P1 Control Signal Connector							12
J2/P2 Data Signal Connector			•••	•	• •	•	12
		•	• •	•	• •	•	14
	• •	•	• •	•	• •	•	14
	• •	•	• •	•	• •	•	
ELECTRONIC INTERFACE		•	• •	•	• •	•	15
Control Signals			• •	•	• •	•	20
Input Control Signals		•	• •		• •	•	20
Reduced Write Current	• •	•	• •	•		•	20
Write Gate							20
Write Gate							21
Direction In							21
Step							21
Drive Select 1 to 4							24
Output Control Signals							25
Seek Complete							25
Track 0							25
Write Fault					1.1		25
Index					1.1	1	26
Ready				•			27
Data Transfer and Drive Selected Sign			• •	•	• •	•	27
			• •	•	• •	•	27
		•	• •	*	• •	•	27
		•	• •	•	• •	•	29
MFM Read Data		•	• •	•	• •	•	
Read/Write Timing		•	• •	•	• •	•	29
Drive Selected Signal	• •	•	• •	•	• •	•	29
DRIVE OPERATIONS	· •	•		•	• •	•	31
Power Sequencing	• •						31
Drive Selection	• •						31
Head Positioning							33
Head Selection							33
Read Operations							33
Write Operations							34



FIGURES

1	M106/M112 Mounting Dimensions					7
2	M206/M212 Mounting Dimensions					8
3	M306/M312 Mounting Dimensions					9
4	Drive Assemblies					10
5	J1 Connector Dimensions					13
6	J2 Connector Dimensions					13
7	J3 Connector Pin Numbers					14
8	J1/P1 Control Signal Cabling .					17
9	J2/P2 Data Signal Cabling					18
10	Cabling for Four-Drive System					19
11	General Seek Timing					22
12	Slow Seek Timing					22
13	Buffered Seek Timing					23
14	Jumper Options					24
15	Index Timing					26
16	Write Precompensation Patterns					29
17	Read/Write Data Timing					30
18	Power Up Sequence					32

TABLES

1	MMI Disk Drive Models	1
2	Specifications	3
3	Physical Dimensions	6
4		4
5		6
6	Fault Codes	8



INTRODUCTION

The purpose of this manual is to introduce the Microcomputer Memories, Inc. (MMI) family of Winchester disk drives and to provide operating requirements and specifications.

GENERAL DESCRIPTION

MMI disk drives feature 3.78-inch (96mm) nonremoveable Winchester disks that provide unformatted data storage of 6.37 megabytes in one-disk models and 12.75 megabytes in two-disk models.

The drives can be mounted in three different bracket sizes: 3.5-inch, 5.25-inch half-height, and 5.25-inch full-height. Each of these brackets conform to industry-standard mounting dimensions.

All models contain a standard Seagate ST-412 interface for control and data communications with the host controller. Table 1 summarizes the MMI disk drive models.

		BRACKET SIZE	
NO. OF DISKS	3.5-Inch	5.25-Inch Half-Height	5.25-Inch Full-Height
1	Model M106	Model M206	Model M306
2	Model M112	Model M212	Model M312

Table 1. MMI Disk Drive Models



1106/M112 OEM MANUAL

The smaller size disk drive package provides the following advantages:

- Less weight
- Greater shock resistance
- Lower power requirement
- Easier fit into compact systems
- Increased thermal stability
- Less heat generation

MMI disks contain 306 cylinders, are soft-sectored, and rotate at 3,600 rpm. They do not contain any prewritten data for use by drive control electronics, such as embedded servo information at index or read/write sync data outside the normal data tracks. This prevents write faults and seek errors from affecting normal drive operation.

Each recording surface is attended by a moveable read/write head that exchanges serial modified-frequency modulation (MFM) data at a rate of 5 megabits per second. The head positioner is a radial actuator that is driven by an open loop stepper motor. For greater accuracy, the stepper motor does not detent at half-step positions. Drive mechanics do not allow the head positioner to step the heads out beyond cylinder 0 during seek errors. This feature ensures seek error recovery by a recalibration to cylinder 0.

Disks and heads are sealed within an impact-resistant aluminum enclosure that provides an ultra-clean air environment and that prevents contamination.

Drive electronics consist of a single circuit board containing a microprocessor, clock, RAM, ROM, and the necessary seek, read/write, and interface logic. The microprocessor controls all drive activities, including spindle speed, stepper motor sequencing, the seek profile, and the receipt and transmission of MFM data. In addition to these tasks, the microprocessor moniters momentary drive events and reports fault conditions by flashing a modulated fault code on a red LED indicator on the front panel. Drive electronics require +5 and +12 VDC input power; no AC power is required.

In summary, MMI disk drives combine the latest in Winchester technology with overall mechanical simplicity to provide a compact, highly-efficient storage device that may be easily integrated into a wide variety of computer systems.



SPECIFICATIONS

Table 2 lists specifications for MMI Winchester disk drives.

CHARACTERISTIC	SPECIFICATION
Design	Specifications
Number of disks	1 or 2
Number of heads	2 (one-disk) 4 (two-disk)
Number of tracks	612 (one-disk) 1,224 (two-disk)
Number of cylinders	306
Media	Oxide or plated
leads	Monolithic (MgZn)
lead positioner	Stepper motor
Performan	ce Specifications
Storage capacity Unformatted Per drive Per surface Formatted Per drive Per surface Per track Per sector Sectors per track	 6.37 megabytes (one disk) 12.75 megabytes (two disks) 3.19 megabytes 5 megabytes (one disk) 10 megabytes (two disks) 2.5 megabytes 8,192 bytes 256 bytes 32

Table 2. Specifications



CHARACTERISTIC	SPECIFICATION
Performance Spe	cifications (continued)
Transfer rate	5 megabits per second
Access times (includes head settling) Average access Maximum Track to track Latency	85 milliseconds 210 milliseconds 18 milliseconds 8.3 milliseconds
Function	al Specifications
Rotational speed	3,600 rotations per minute
Recording density	10,943 bits per inch (BPI)
Track density	588 tracks per inch (TPI)
Areal density	6.43 megabits per square inch
Encoding method	Modified-frequency modulation (MFM)
Emitted acoustical noise	To be determined
Power	Requirements
Input voltage	+ 5 VDC ±5% @ 0.8 Amps typica +12 VDC ±5% @ 0.7 Amps typica
Maximum ripple	50 millivolts (with resistive load at operating current)
Max. start (10 sec.)	2 Amps
	12 watts average

0



0

0

0

M106/M112 OEM MANUAL

CHARACTERISTIC	SPECIFICATION
Envir	onmental Limits
Operating temperatures	40° F to 115° F 4° C to 46° C
Storage temperatures	-40° F to 140° F -40° C to 60° C
Relative humidity	8% to 80% (non-condensing)
Maximum wet bulb	78°F (26°C)
Maximum ambient magnetic field	To be determined
Shock Operating Non-operating	To be determined To be determined
F	Reliability
Error rates Soft read errors Hard read errors Seek errors	1 per 10 ¹⁰ bits read 1 per 10 ¹² bits read 1 per 10 ⁶ bits read
Mean time between failures (MTBF)	12,000 hours
Mean time to repair (MTTR)	30 minutes
Preventive maintenance	None
Service life	5 years

Table 2. Specifications (continued)



106/M112 OEM MANUAL

PHYSICAL DIMENSIONS

Table 3 lists the physical dimensions of MMI disk drive models; figures 1, 2 and 3 show the mounting dimensions.


MMI recommends that drives be mounted vertically on either side or horizontally with the printed circuit board facing down. Do not mount a drive horizontally with the printed circuit board facing up. To insure vibration isolation, a clearance of at least 0.1-inch must be provided between the the top cover of the drive and the host frame and between the printed circuit board and the host frame.


There are eight mounting holes, four on the bottom and two on each side, for mounting a drive in an enclosure.

Note: When mounting a drive, make sure that the four chassis mounting screws do not protrude inside the frame more than 0.09 inch.

		M206/212	M306/M312
Height	1.625 inches	1.625 inches	3.250 inches
	(41.3 mm)	(41.3 mm)	(82.6 mm)
Width	4.0 inches (101.6 mm)	5.75 inches (146.0 mm)	5.75 inches (146.0 mm)
Depth	5.75 inches	8.0 inches	8.0 inches
	(146.0 mm)	(203.2 mm)	(203.2mm)
Weight	2.2 pounds	2.2 pounds	2.2 pounds
	(1 KG)	(1 KG)	(1 KG)


Table 3. Physical Dimensions

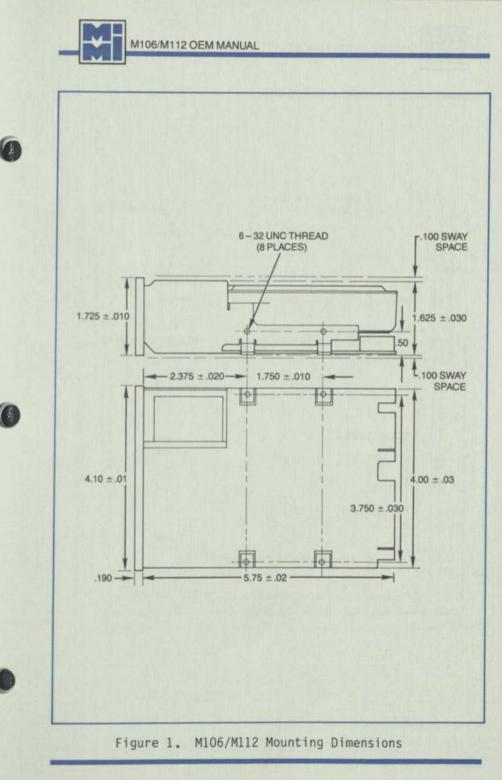

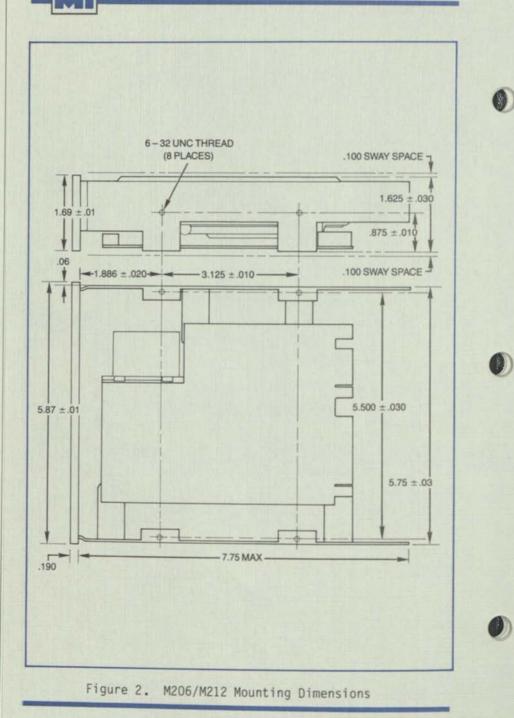




-

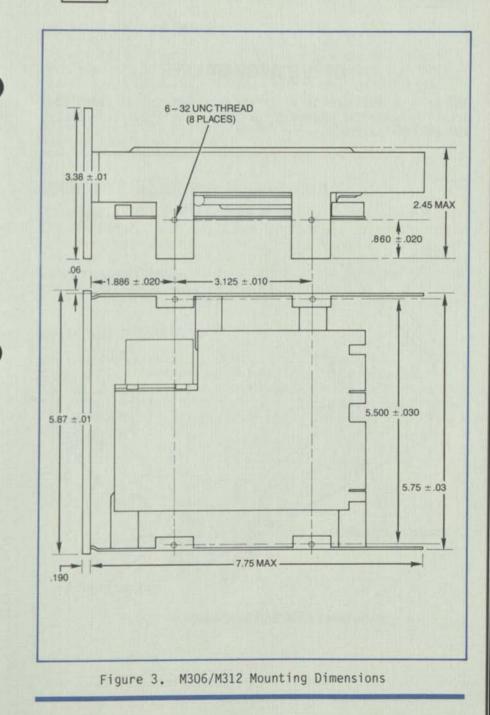



DRIVE ASSEMBLIES

MMI disk drives consist of three major assemblies (see figure 4): head/disk assembly, printed circuit board assembly, and chassis assembly.

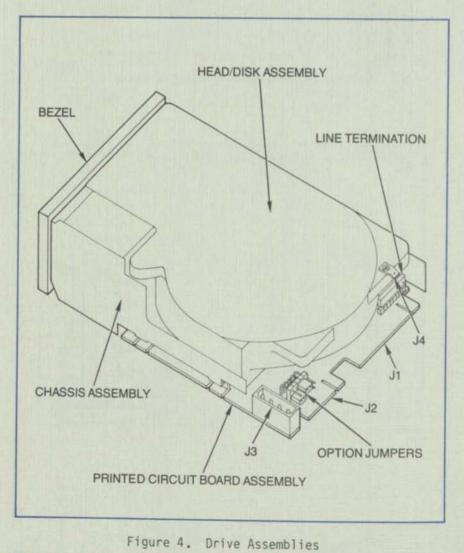



HEAD/DISK ASSEMBLY

The head/disk assembly (HDA) is a factory-sealed chamber that contains the head positioner, head assembly, spindle motor, and disk media. In addition to sheltering these components from changes in the outside environment, the HDA features an integral air filtering system that maintains a clean environment and permits ambient pressure equalization without contaminate entry.

PRINTED CIRCUIT BOARD ASSEMBLY

A single printed circuit board assembly (PCBA) contains all drive control, read/write, and interface electronics. Under microprocessor control, these circuits manage drive activities, including index, track 0, drive up to speed, and fault detection, drive and head selection, head positioning, and read/write operations.

CHASSIS ASSEMBLY

The chassis assembly provides a rigid frame for all drive components. The front panel bezel and drive select/drive fault LED indicator are mounted on the front of the chassis, the HDA is shock-mounted on top of the chassis, and the PCBA is mounted on the bottom of the HDA. The chassis contains threaded mounting holes.



PHYSICAL INTERFACE

The physical interface between the controller and the disk drive is via four connectors (shown in figure 4):

- J1/P1 control signal connector
- J2/P2 data signal connector
- J3/P3 DC power connector
- J4/P4 chassis ground connector

This section describes each of these connectors and provides connector dimensions.

J1/P1 CONTROL SIGNAL CONNECTOR

The control signal connector is a 34-pin edge connector at J1 on the PCBA. The pins are numbered 1 through 34 with the odd-numbered pins located on the component side of the PCBA. Pin 34 is located on the end of the connector that is closest to the J2 data signal connector. All odd-numbered pins are ground. A key slot is provided between pins 4 and 6. The recommended mating connector (P1) is AMP ribbon connector P/N 88373-3 or Molex 15-35-1341. Figure 5 shows J1 connector dimensions.

J2/P2 DATA SIGNAL CONNECTOR

The data signal connector is a 20-pin edge connector at J2 on the PCBA. The pins are numbered 1 through 20 with the odd-numbered pins located on the component side of the PCBA. Pin 20 is located on the end of the connector that is closest to the J3 DC power connector. A key slot is provided between pins 4 and 6. The recommended mating connector (P2) is AMP ribbon connector P/N 88373-6 or Molex P/N 15-35-1201. Figure 6 shows J2 connector dimensions.

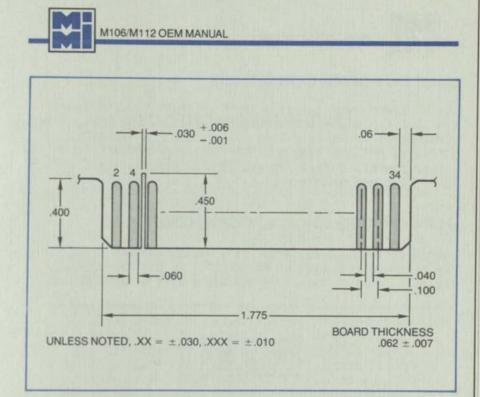


Figure 5. J1 Connector Dimensions

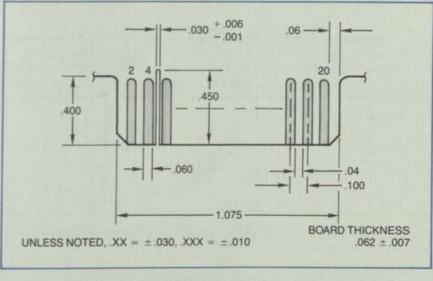


Figure 6. J2 Connector Dimensions

Version 1.0



J3/P3 DC POWER CONNECTOR

The DC power connector is a 4-pin AMP Mate-N-Lok connector P/N 350211-1 at J3 on the component side of the PCBA. The recommended mating connector (P3) is AMP P/N 1-408424-0 utilizing AMP pins P/N 350078-4 (strip) or P/N 61173-4 (loose piece). Figure 7 shows J3 pin numbers; table 4 lists DC power requirements.

J4/P4 CHASSIS GROUND CONNECTOR

The chassis ground connector is a faston AMP P/N 61761-2. The recommended mating connector (P4) is AMP P/N 62187-1. The hole in J4 accommodates a maximum wire size of 18 AWG.

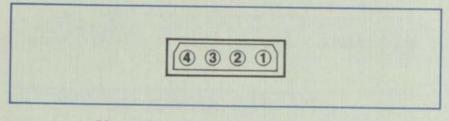


Figure 7. J3 Connector Pin Numbers

Table 4. DC Power Requirement	it	t	ć																																				l	l	l	l	ł	ł	l	ł		ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł				l	i	i	1	i	ł	ł	ł	ł				ł	é	ł	ł	l	i	ł	ł	ĺ			ł	į	é	ł		ł	ł	I	ł		l	i	i		ł		ί	l		1	ò	į	į	Ē	6	į	l	2	R	F	ł			•	r		2	2	e	É	ŧ	İ	V	h	ý	1))	Ċ	(1)		l
-------------------------------	----	---	---	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	---	---	---	---	---	---	---	---	--	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	--	--	--	---	---	---	---	---	---	---	---	---	--	--	--	---	---	---	---	---	---	---	---	---	--	--	---	---	---	---	--	---	---	---	---	--	---	---	---	--	---	--	---	---	--	---	---	---	---	---	---	---	---	---	---	---	---	--	--	---	---	--	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	--	---	--	---

J3		CURREI	NT AMPS
CONNECTOR	DESCRIPTION	Maximum	Typical
Pin 4	+5 VDC ±5%		10 April 10
Pin 3	+5 VDC return	1.0	0.9
Pin 1	+12 VDC ±5%*	**	
Pin 2	+12 VDC return	2.0	0.5

Version 1.0



ELECTRONIC INTERFACE

The electronic interface between the controller and the drive consists of the following signals:

- <u>Control signals (J1/P1)</u>. Control signals are open collector TTL digital signals (low = 'true'). Since the DRIVE SELECT lines enable multiplexing of control signals, the control signal cable may be daisy-chained into a multiple-drive configuration containing up to four drives with the last drive in the chain providing the input signal terminations.
- Data signals (J2/P2). Data signals are differential read and write data signals as defined by EIA RS-422. In addition to data signals, this cable carries an open collector TTL digital DRIVE SELECTED status signal. Data lines cannot be multiplexed; a separate data cable is required for each drive in a multipledrive configuration.
- <u>DC power (J3/P3) and chassis ground (J4/P4)</u>. These lines provide the +5 and +12 VDC input voltages and ground.


Tables 5 lists the pin assignments for these connectors. Figures 8 and 9 show the interconnection cabling between the controller and the drive. Figure 10 shows the typical cabling for a four-drive system. ÷

M106/M112 OEM MANUAL


Light way of	PIN N	UMBER			
CONNECTOR	Signal	Ground	SIGNAL TYPE	I/0	SIGNAL NAME
J1/P1	2	(1)	S	I	Reduce Write Cur- rent (not used)
	4	(3)	S	I	Reserved (Head 2 ² in future)
	6	(5)	S	Ι	Write Gate
	8	(7)	S S	0	Seek Complete
24.01	10	(9)	S S S	0	Track O
34-Pin	12	(11)	S	0	Write Fault
Ribbon	14	(13)		I	Head Select 2°
Daisy- Chain	16	(15)	-	-	Reserved (to J2-7)
l	18 20	(17) (19)	S	I	Head Select 2'
	20	(21)	5	0	Index
	24	(23)	C C	I	Ready
	26	(25)	S S	I	Step Drive Select 1
	28	(27)	S	I	Drive Select 2
	30	(29)	S	Î	Drive Select 3
+	32	(31)		Î	Drive Select 4
J1/P1	34	(33)	S	Ĩ	Direction In
J2/P2	1	(2)	S	0	Drive Selected
4	3	(4)	-	-	Reserved
	5	(6)		-	Reserved
20 01-	7	(8)	-	-	Reserved (to J1-16)
20-Pin Ribbon	9	(10)	-	-	Reserved
Radial	11 13	(12)	-	-	Ground
l	13		D	I I	+ Write Data
	15	(16)	U	1	- Write Data Ground
	17	(10)	D	0	+ Read Data
+	18	1.2.2	D	0	- Read Data
J2/P2	19	(20)	-	-	Ground
J3/P3	1	R. Car		1	+ 12V D.C. In
Radial	23			-	+ 12V D.C. Return
	3		100	-	+ 5V D.C. Return
J3/P3	4	Sal 1	1-31	-	+ 5V D.C. In
S-Single-Er	ided D-Di	ifferenti	ial I-Dri	ive In	nput O-Drive Output

Table 5. Pin Assignments




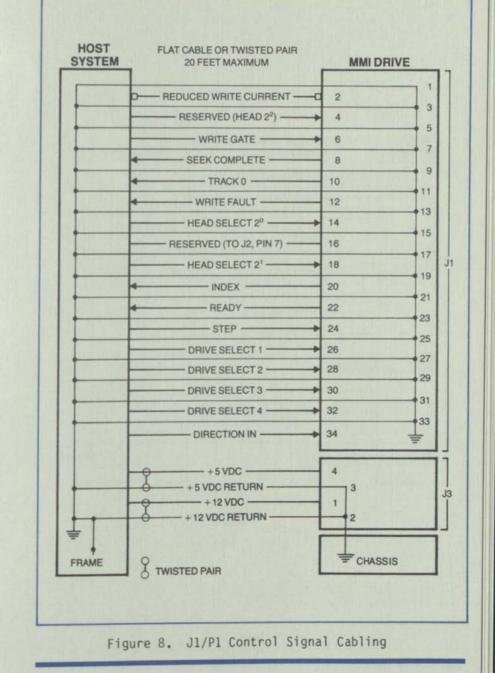

Version 1.0

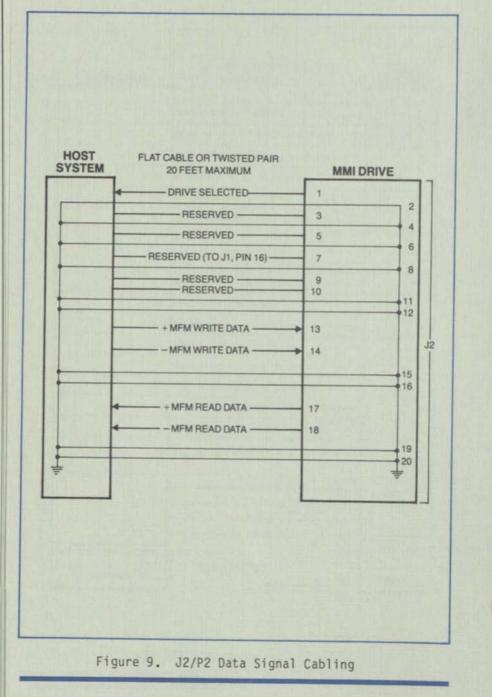

Version 1.0

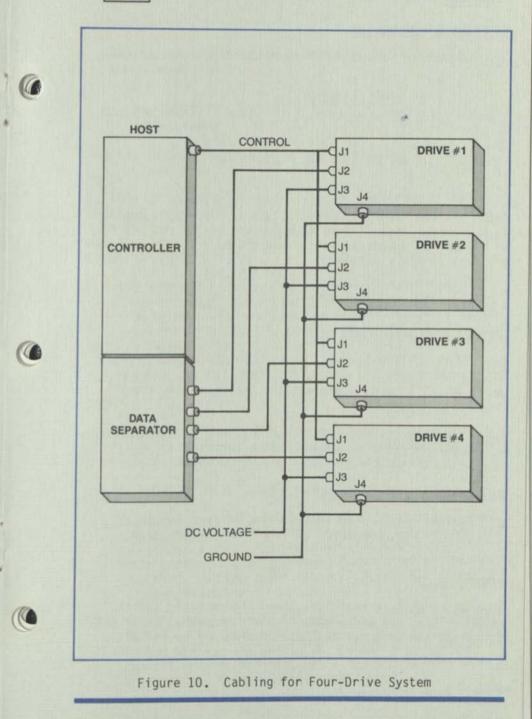

Version 1.0



CONTROL SIGNALS

Control signals have the following electrical specifications:

TRUE: 0.0 VDC to 0.4 VDC @ I = -30mA (open collector driver)
FALSE: 2.5 VDC to 5.25 VDC @ I = +250µA (Schmitt trigger TTL input)

There are two kinds of control signals: input and output. Input control signals come from the controller and are sent to the drive; output control signals come from the drive and are sent to the controller.

Input Control Signals

Input control lines consist of REDUCED WRITE CURRENT, WRITE GATE, HEAD SELECT 2° , 2° and 2° , DIRECTION IN, STEP, and DRIVE SELECT 1 to 4. This section describes the signals on each of these lines.

Note: All input lines (except REDUCED WRITE CURRENT) share a 220/330 ohm resistor pack for line termination.

REDUCED WRITE CURRENT

Since drive logic controls the write current internally, this line is not supported or terminated in MMI drives.

WRITE GATE

When WRITE GATE is true, stepping is prohibited and the selected head can write data on the disk. When WRITE GATE is false, the selected head can read data from the disk.



HEAD SELECT 20, 21 AND 22

A combination of the signals on these lines select the active read/write head:

<u>_2'</u>	2°	Selected Head
False	False	0
False	True	1
True	False	2
True	True	3

Note: HEAD SELECT 2² is unused; it is terminated, however, to be compatible with larger capacity drives.

DIRECTION IN

When DIRECTION IN is true, the heads move inward toward the center of the disk when the STEP line is pulsed. When DIRECTION IN is false, the heads move outward toward cylinder 0 when the STEP line is pulsed. The DIRECTION IN signal must not change while step pulses are issued; there is no set-up time required.

STEP

When STEP pulses low (true), the read/write heads move in the direction indicated by DIRECTION IN. The leading edge of the pulse deactivates SEEK COMPLETE (see figure 11).

There are two valid seek methods:

• <u>Slow seek</u>. A STEP pulse rate of 1 to 15 milliseconds places the drive into the slow seek mode, wherein head movements are in discrete 3 millisecond steps. In this mode, the trailing edge of each step pulse causes the heads to step in or out one cylinder. Figure 12 shows slow seek timing.

Note: A seek to track 340 moves the read/write heads to a special area inside of the innermost cylinder, called the landing zone. MMI recommends that the controller move the read/write heads to the landing zone before removing drive input power.




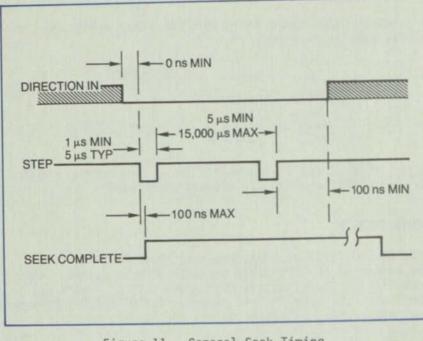


Figure 11. General Seek Timing

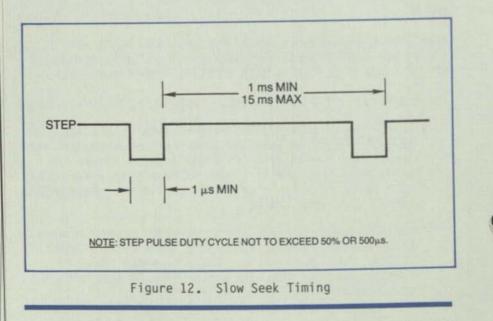

Page 22


Version 1.0

106/M112 OEM MANUAL



 <u>Buffered seek.</u> A STEP pulse rate of 5 to 200 microseconds places the drive into the buffered seek mode, wherein head movement is in one continuous motion. In this mode, drive logic buffers incoming step pulses until either 200 microseconds elapse after the last pulse or the total number of pulses exceeds the maximum number of possible head movements. When either of these conditions occur, drive logic executes the step pulses using an optimum algorithm. Figure 13 shows buffered seek timing.

Note: If DIRECTION IN is false and the total number of pulses exceeds the maximum number of outward head movements, the heads move to cylinder O (called recalibration) and the TRACK O line goes true. If DIRECTION IN is true and the total number of pulses exceeds the maximum number of inward head movements, the heads move to the innermost cylinder.

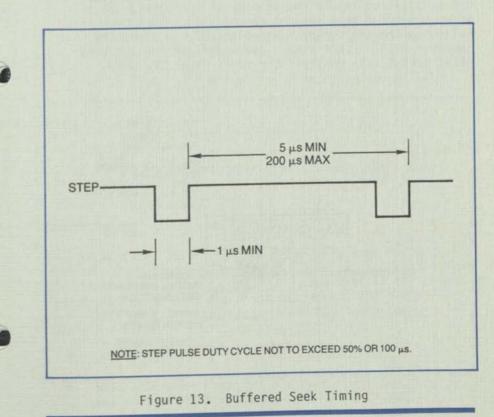




106/M112 OEM MANUAL

DRIVE SELECT 1 TO 4

When the jumpered DRIVE SELECT line is true, the drive receives and responds to control signals from the controller. When the jumpered DRIVE SELECT line is false, the drive interface is disconnected and the drive cannot receive or respond to control signals from the controller. When a drive is selected and ready, the red LED on the front panel goes on.

In multiple-drive systems, it is necessary to configure each drive (maximum of four per controller) with a unique address (1, 2, 3 or 4) so that control signals can be multiplexed. To assign a specific address to a drive, a jumper plug must be placed over the appropriate pins on the PCBA. Figure 14 shows where to install the jumper plug for each address.

When the jumper on the radial mode pins is removed, the drive is placed in the radial mode of operation. In this mode, the drive receives and responds to all control signals from the controller, regardless of the signal on the jumpered DRIVE SELECT line. The signal on the jumpered DRIVE SELECT line controls the front panel LED only.

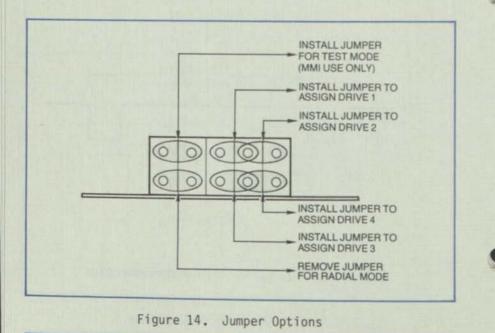

Version 1.0



Output Control Signals

Output control lines consist of SEEK COMPLETE, TRACK O, WRITE FAULT, INDEX, and READY. This section describes the signals on each of these lines.

SEEK COMPLETE

When SEEK COMPLETE is true, the read/write heads are settled over the final cylinder at the end of a seek operation and read/write operations can occur. When SEEK COMPLETE is false, the read/write heads are not settled and no read/ write operations can occur. SEEK COMPLETE goes false when any one of the following conditions occur:

- Drive logic initiates a recalibration during the power up sequence.
- Drive logic receives a step pulse from the controller; SEEK COMPLETE goes false within 100 nanoseconds after the leading edge of the pulse.
- Drive logic determines that a fault condition exists.

TRACK 0

When TRACK O is true, the read/write heads are positioned over cylinder O (the outermost track). When TRACK O is false, the heads are not positioned over cylinder O.

WRITE FAULT

When WRITE FAULT is true, a condition exists at the drive that may cause improper writing on the disk; further writing and stepping is inhibited until the condition is corrected. When WRITE FAULT is false, write operations can occur. WRITE FAULT goes true when any one of the following conditions occur:

- Input voltages (+5 or +12 VDC) are too low.
- WRITE GATE goes true, but the drive does not receive data on the +WRITE DATA and -WRITE DATA lines.




- Drive receives a STEP pulse when WRITE GATE is true.
- Read/write head assembly is defective.

When WRITE FAULT goes true, drive logic waits two seconds and reverifies the fault. If the fault condition still exists, the true WRITE FAULT signal is latched until input power is removed; if the fault condition is gone, WRITE FAULT goes false and the heads are recalibrated.

Note: If the drive receives a STEP pulse when WRITE GATE is true, the write fault latches until input power is removed.

INDEX

INDEX pulses true once each disk revolution (16.67 milliseconds nominal) to indicate that the beginning of track (called the index) is passing beneath the heads. Only the transition from false to true is valid. Figure 15 shows INDEX timing.

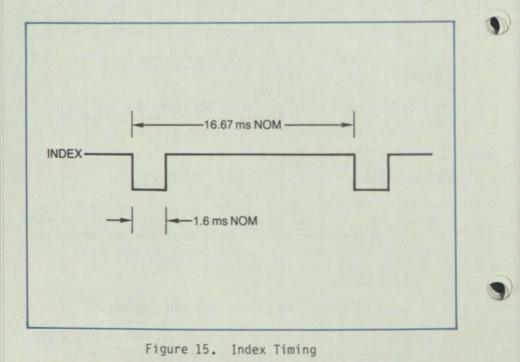



READY

When READY is true (in addition to SEEK COMPLETE being true), the drive is ready to read, write or seek and I/O signals are valid. When ready is false, all writing and seeking is inhibited. Typically, it takes about nine seconds for READY to go true after power is applied to the drive.

If a fault condition exists (READY does not go true), drive logic flashes a fault code on the front panel LED. Fault codes consist of a series of four long or short flashes. Table 6 summarizes the fault codes that can appear.

DATA TRANSFER AND DRIVE SELECTED SIGNALS

The J2/P2 connector contains data transfer lines and a DRIVE SELECTED status line. This section describes the signals on these lines.

Data Transfer Signals

Two pairs of balanced signals transfer data to and from the drive: MFM WRITE DATA and MFM READ DATA.

MFM WRITE DATA

This pair of balanced signals define the transitions to be written on the track. When WRITE GATE is true, a transition of the +MFM WRITE DATA line going more positive than the -MFM WRITE DATA line causes a flux reversal on the track. The controller must keep the -MFM WRITE DATA line more positive than the +MFM WRITE DATA line when WRITE GATE is false.

To insure data integrity, the controller should precompensate write data written on tracks 128 through 306. Write precompensation minimizes bit shift and provides an optimal error rate. The optimum amount of precompensation is 12 nanoseconds for both the early and late bits. Figure 16 shows the bit patterns to precompensate; all other patterns should be written "on time."



Table 6. Fault Codes

Fault No.	Flash Sequence				Description
1	S	S	S	L	Write fault
2	S	S	L	S	Track O sensor remains false when heads are at cylinder O
3	S	S	L	L	Track O sensor remains true when heads are not at cylinder O
4	S	L	S	S	Head positioner fault
5	S	L	S	L	Microprocessor ROM fault
6	S	L	L	S	Microprocessor RAM fault
7	S	L	L	L	Microprocessor I/O fault
8	L	S	S	S	Power up fault
9	L	S	S	L	Spindle speed not within $\pm 1\%$ tolerance at end of power up
10	L	S	L	S	Spindle speed not within $\pm 1\%$ toler-ance during normal operation
11	L	S	L	L	Spindle speed below 20% tolerance
12	L	L	S	S	Motor phase sequencing fault during normal operation

L = long flash S = short flash


Fault 1 latches after two seconds (if the write fault is not corrected). Faults 2 through 7 latch as soon as they occur. Faults 8 through 12 latch after three unsuccessful attempts to recover.


When a fault latches, the fault code flashes indefinitely. Should this occur, remove power from the drive. After several seconds, reapply power. If the fault condition reoccurs, the drive may require servicing.

Page 28

 5



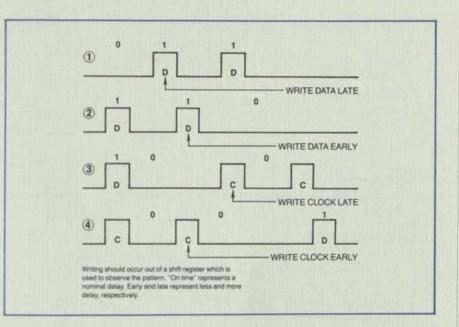



MFM READ DATA

This pair of balanced signals transmit the data read from a track to the controller. The transition of the +MFM READ DATA line going more positive than the -MFM READ DATA line represents a flux reversal on the track of the selected head.

READ/WRITE TIMING


Figure 17 shows the necessary sequence of events (with associated timing restrictions) for proper read/write operation of the drive.

Drive Selected Signal

The DRIVE SELECTED line goes true when the drive's jumpered DRIVE SELECT line goes true. This line informs the controller that the drive's interface is connected and ready to receive control signals.

Version 1.0



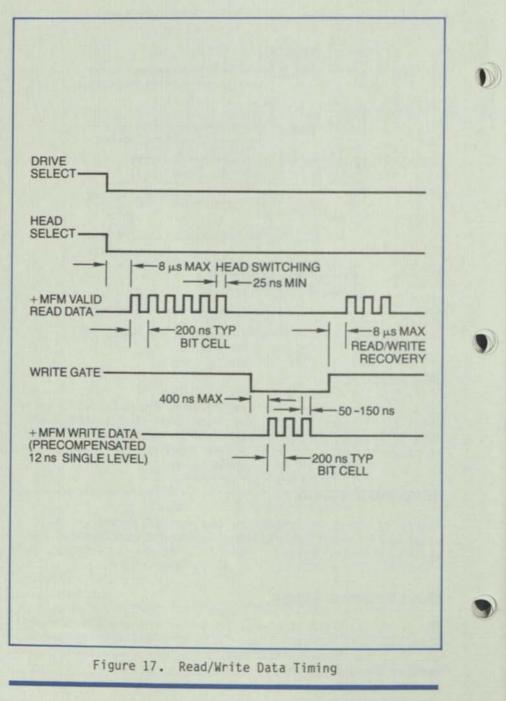

Page 30



DRIVE OPERATIONS

Drive operations consist of power sequencing, drive selection, head positioning, head selection, read operations, and write operations.

POWER SEQUENCING

MMI disk drives require +5 and +12 VDC input power. These voltages may be applied and removed in any order. The +5 VDC rise time must not exceed one second and the +12 VDC must be applied within five seconds to avoid a fault condition. After receiving both voltages, drive logic performs the following actions in the order shown:


- Verifies that the spindle speed is within 1% of 3,600 rpm.
- Moves the heads to cylinder 0 (called recalibration) and activates the TRACK 0 control line.
- Activates SEEK COMPLETE control line.
- Activates READY control line.

With the READY line activated, the drive can perform read, write, and seek operations. Figure 18 shows the power up sequence.

DRIVE SELECTION

For a drive to receive and respond to control signals from the controller, the signal on its jumpered DRIVE SELECT line must be activated by the controller. When this line is activated, the red LED on the front panel goes on; when the line is deactivated, the LED goes off.

When in the radial mode of operation, the drive interface remains connected at all times, regardless of the signal on the jumpered DRIVE SELECT line. The signal on the jumpered DRIVE SELECT line controls the front panel LED only.

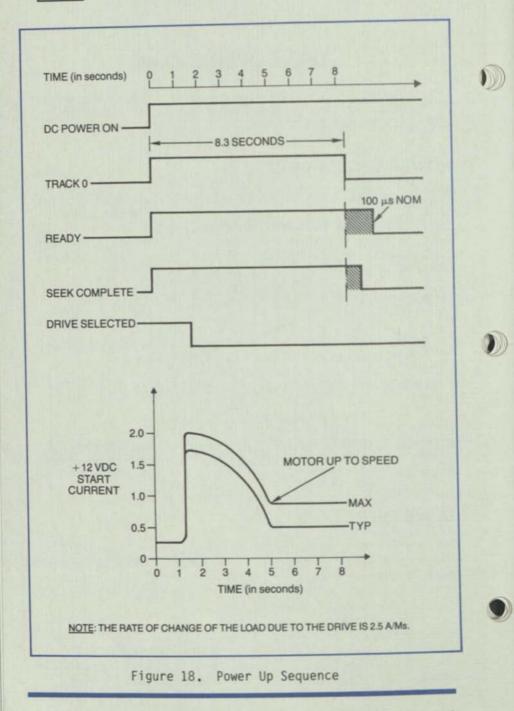

Page 32



HEAD POSITIONING

To move the read/write heads to any valid cylinder, the controller must perform the following actions in the order shown:

- Deactivate the WRITE GATE control line.
- Activate the appropriate DRIVE SELECT control line.
- Make sure that the READY and SEEK COMPLETE control lines have been activated by the drive.
- Activate the DIRECTION IN line, if the heads are to be stepped in; deactivate this line, if the heads are to be stepped out.
- Pulse the STEP line. Each step pulse causes the heads to move one track in or out, depending on the state of the DIRECTION IN line.



HEAD SELECTION

To select a read/write head, the controller must place the appropriate binary address on the HEAD SELECT 2° and HEAD SELECT 2' control lines.

READ OPERATIONS

To recover data from a disk surface, the controller must perform the following actions in the order shown:

- Deactivate the WRITE GATE control line.
- Activate the appropriate DRIVE SELECT line.
- Make sure that the READY and SEEK COMPLETE control lines have been activated by the drive.
- Select the appropriate head by placing its binary address on the HEAD SELECT 2° and HEAD SELECT 2' lines.



WRITE OPERATIONS

To write data onto a disk surface, the controller must perform the following actions in the order shown:

- Activate the appropriate DRIVE SELECT line.
- Make sure that the READY and SEEK COMPLETE control lines have been activated by the drive.
- Select the appropriate head by placing its binary address on the HEAD SELECT 2° and HEAD SELECT 2' lines.
- Make sure that the WRITE FAULT line has not been activated by the drive.
- Activate the WRITE GATE line and place data on the +MFM WRITE DATA and -MFM WRITE DATA lines.



ADDENDUM

Some early production MMI disk drives contain a 5.25-inch printed circuit board, instead of the standard 3.5-inch board. A drive with this larger board operates the same as a drive with the smaller board, except for the following:

- Pulsing the STEP line with WRITE GATE true, does not result in WRITE FAULT going true; however, writing is inhibited.
- All write faults (except +12 VDC being too low) latch. To recover from a write fault, input power to the drive must be removed and then reapplied.
- Although the same jumper options exist (drive select, radial mode and test mode), the pins that must be jumpered are different. Figure A-1 shows where to install jumper plugs for the various options.

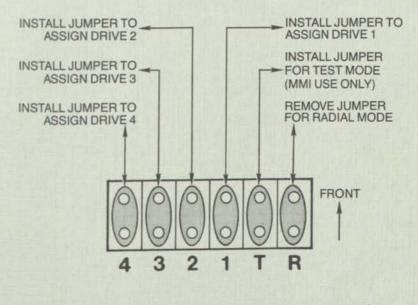


Figure A-1. Jumper Options (For 5.25-Inch PCBA)