

8.0 NCL 5525/5526 INSTALLATION SPECIFICATIONS

Interface Connectors and Jumper Configurations

Fixed Disk Interface:


- CN1 = 34-Pin Control Cable
- CN2 = 20-Pin Data Cable (Drive One)
- CN3 = 20-Pin Data Cable (Drive Two)

Floppy Disk Interface (NCL 5525 Only):

- CN4 = 34-Pin Control and Data Cable
- CN5 = LED Connector

Jumpers:

- JP0 = I/O Address Host to Controller
Open = 1F0-1F7 (Normal Operation)
- JP1 = I/O Address Host to Controller
Open = 3F2-3F7 (Normal Operation)
- JP2 = Drive Select Option
Open = from factory
- JP4 = Close (Normal Operation)

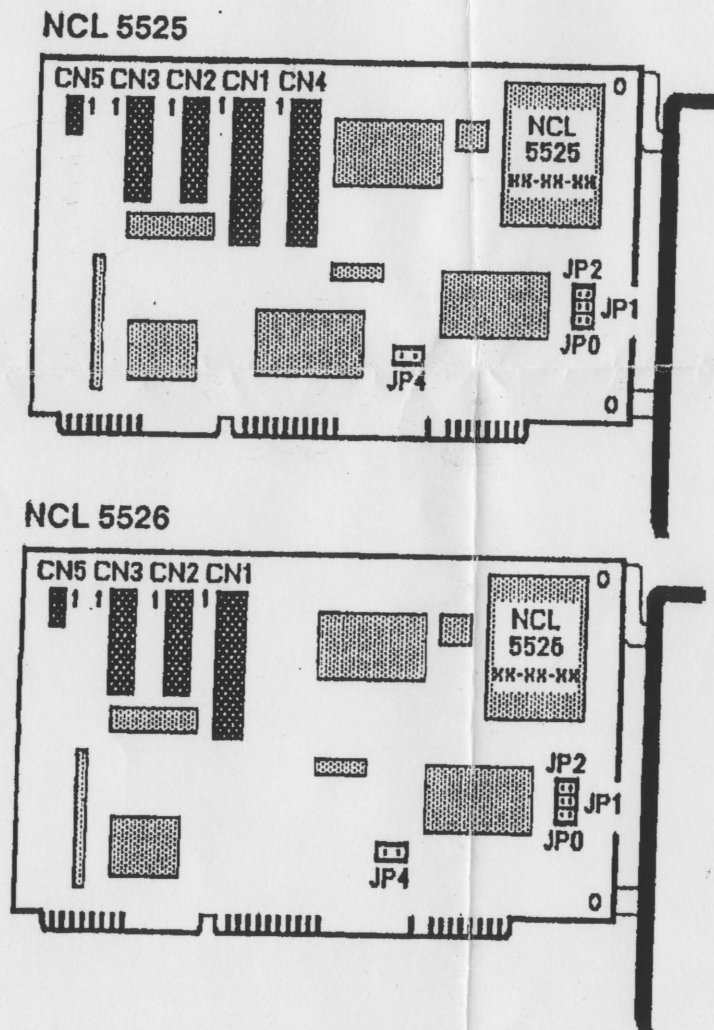

NCL 5525/5526 Controllers Connector and Jumper Locations

NCL 5525
MFM 2:1